


## **AM100-PRO**

Vehicle Signal Booster Kit

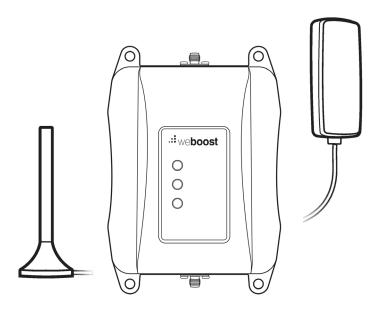

### **User Manual**

## Index

Package	· Contents	1	
STEP 1:	Mount Outside Magnetic Antenna	2	
STEP 2:	Mount Inside Antenna	4	
STEP 3:	Connect Outside Antenna Cable To Booster	5	
STEP 4:	Connect Inside Antenna Cable To Booster	6	
STEP 5:	Connect Power Supply To Booster	7	
_ight Patterns			
Froubleshooting			
Safety Guidelines			
Specifications			
Varranty			

# Package Contents



AM100-PRO Booster



Outside Antenna



Inside Antenna



Power Supply

## **Step 1:** Mount Outside Magnetic Antenna



### Identify a location on the top of your vehicle that is:


- Near the center of the roof
- At least 30 centimeters away from any other antennas
- · At least 30 centimeters away from any windows (including sunroofs)



Clean the surface where you will place the outside antenna.



Mount the outside antenna by placing on top of vehicle.

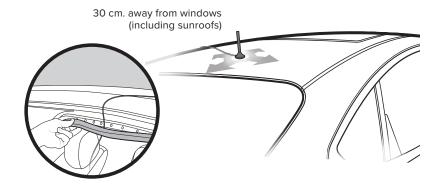

NOTE: For roofs that are non-magnetic, call Tech Support +2779 679 3305 for an adhesive disk to mount the outside antenna.



### (STEP 1 cont.)

## See options below on how cable can be routed with different vehicles.

NOTE: The cable is strong enough that it may be shut in most vehicle doors without damaging the cable.




**Car/Sedan:** Cable routed into rear side door.

NOTE: When going through car wash, remember to remove your antenna.




**SUV/Van/Hatchback:** Cable routed into top of hatchback door.

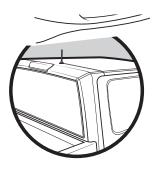

**Truck:** Cable routed into side door.

## Step 2: Mount Inside Antenna

Identify a place to mount the In-Vehicle Antenna, either on the side of the seat or on the dash and mount. The location should be at least 45 centimeters but no more than 90 centimeters from where the cell phone device will be used. Use the Velcro® adhesive strip/adhesive strip provided and attach to desired location.

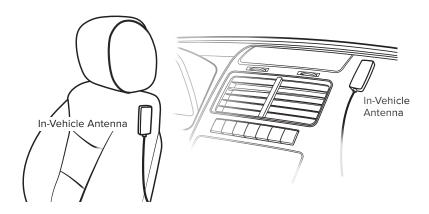

# **Step 3:** Connect Coax Cables To Booster

Connect the cable from the Mini-Mag Mount Antenna to the port labeled "Outside Antenna" on the AM100-PRO booster.




Connect the cable from the In-Vehicle Antenna to the port labeled "Inside Antenna" on the booster.



# **Step 4:** Connect Power Supply To Booster


Connect the power supply cord to the end of the AM100-Pro labeled "Power."

NOTE: Do NOT connect the power to the Signal Booster until you have connected both the Inside and Outside Antennas.

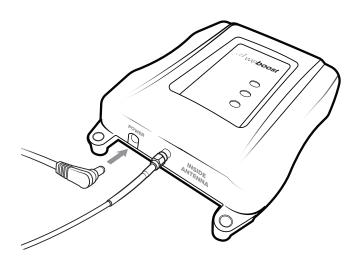

# **Step 5:** Plug Power Adapter Into Vehicle's Power Supply

Plug the power adapter into vehicle's DC power supply. If your Drive AM100-Pro is functioning correctly, all 3 lights will be green.

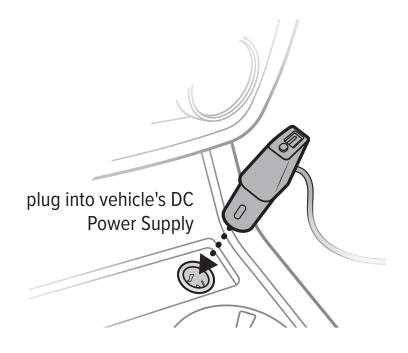

**NEED HELP?** 





## **Light Patterns**

#### Solid Green

This indicates that your booster is functioning properly and there are no issues with installation.

### Blinking Red, Then Solid Green

This indicates that one or more of the booster bands has reduced power due to a feedback loop condition called oscillation. This is a built in safety feature to prevent harmful interference with a nearby cell tower. If you are already experiencing the desired signal boost, then no further adjustments are necessary. If you are not experiencing the desired boost in coverage then refer to the Troubleshooting section below.

#### Solid Red

This is due to a feedback loop condition called oscillation. This is a built in safety feature that causes a band to shut off to prevent harmful interference with a nearby cell tower. Refer to Troubleshooting section below.

### Light Off

If the AM100-PRO Signal Booster's light is off, verify your power supply has power.

NOTE: The Signal Booster can be reset by disconnecting and reconnecting the power supply.

After troubleshooting you must initiate a new power cycle by disconnecting and then reconnecting power to the Booster.

NEED HELP?





## **Troubleshooting**

#### FIXING BLINKING OR SOLID RED ISSUES

This section is only applicable if the booster is red or blinking red and you are not experiencing the desired signal boost.

- 1 Unplug the Booster's power supply.
- Relocate the inside and outside antenna further from each other. The objective is to increase the separation distance between them, so that they will not create this feedback condition discussed before.
- 3 Plug power supply back in.
- Monitor the indicator light on your booster. If, after a few seconds of 'power on', a solid or blinking red light appears, repeat steps 1 through 3. Increase the separation distance until the condition is corrected and/or desired coverage area is achieved. Note: Horizontal separation of the two antennas typically requires a shorter separation distance than perpendicular separation.
- If you are having any difficulties while testing or installing your booster, contact our Bolton Technical Customer Support team for assistance (+27796793305).

#### FREQUENTLY ASKED QUESTIONS

#### How can I contact customer support?

Customer Support can be reached monday to friday by calling +27796793305 or through our support site at www.BoltonTechnicalAfrica.com

#### Why do I need to create distance between the booster and the antenna?

Antennas connected to a booster create spheres of signal. When these spheres overlap, a condition called oscillation occurs. Oscillation can be thought of as noise, which causes the booster to scale down it's power or shut down to prevent damage. The best way to keep these spheres of signal from overlapping is to maximize separation between the inside and outside antennas.

## **Safety Guidelines**

**Use only the power supply provided in this package.** Use of a non-weBoost product may damage your equipment.

Any antenna used with this device must be located at least 20 centimeters from all persons.

#### This is a CONSUMER device.

The AM100-Pro is an Approved and Registered Device. Most wireless providers consent to the use of signal boosters. Some providers may not consent to the use of this device on their network. If you are unsure, contact your provider.

You **MUST** cease operating this device immediately if requested by your local licensed wireless service provider.

## **Specifications**

### **AM100-Pro Specifications**

Product		WeBoost Signal Booster			
Model Number		AM100-PRO			
Connectors		SMA			
Antenna Impedance OHm		50			
Frequency MHz		1920-1980 / 2110-2170	1710-1785 / 1805-1880	880-915 / 925-960	
Bands		B1	B3	B8	
			·	·	
Passband Gain UL/DL		53.9 / 53.7	49.9 / 51.8	49.3 / 50.1	
20 dB Bandwidth (MHz)					
	Typical	74.8	85.6	39.4	
	Maximum	77.4	86.7	41.5	
Power output for single cel	II phone (dBm)				
	UPLINK	20.2	21.2	20.3	
	DOWNLINK	2.8	3.2	2.6	
Power output for multiple i	received channels				
(Uplink) dBm	No. Tones				
	2	20.2	21.2	20.3	
	3	18.4	19.4	18.5	
	4	17.2	18.2	17.3	
	5	16.2	17.2	16.3	
	6	15.4	16.4	15.5	
Power output for multiple i	received channels				
(Downlink) dBm	No. Tones				
<u>(=</u>	2	2.8	3.2	2.6	
	3	1	1.4	0.8	
-	4	-0.2	0.2	-0.4	
	5	-1.2	-0.8	-1.4	
	6	-2	-1.6	-2.2	
Noise Figure UL/DL		7.4 / 7.0	5.0 / 6.0	4.4 / 4.4	
Isolation dB			-65		
Power Requirements			5 V, 1.5A		

The Manufacturer's rated output power of this equipment is for single carrier operation. For situations when multiple carrier signals are present, the rating would have to be reduced by 3.5 dB, especially where the output signal is re-radiated and can cause interference to adjacent band users. This power reduction is to be by means of input power or gain reduction and not by an attenuator at the output of the device.

## 🕢 1 YEAR WARRANTY

weBoost Signal Boosters are warranted for one (1) year against defects in workmanship and/or materials. Warranty cases may be resolved by returning the product directly to the reseller with a dated proof of purchase.

Signal Boosters may also be returned directly to the manufacturer at the consumer's expense, with a dated proof of purchase and a Returned Material Authorization (RMA) number supplied by Bolton Technical. Bolton Technical shall, at its option, either repair or replace the product.

This warranty does not apply to any Signal Boosters determined by Bolton Technical to have been subjected to misuse, abuse, neglect, or mishandling that alters or damages physical or electronic properties.

Replacement products may include refurbished weBoost products that have been recertified to conform with product specifications.

RMA numbers may be obtained by contacting Customer Support

DISCLAIMER: The information provided by Bolton Technical is believed to be complete and accurate. However, no responsibility is assumed by Bolton Technical for any business or personal losses arising from its use, or for any infringements of patents or other rights of third parties that may result from its use.

NEED HELP?





Notes	
	_
	_
	_
	_
	_
	_









g

Represented by Bolton Technical: Sole Distributors in Africa 
\$\mathcal{G}\)+27796793305 

BoltonTechnicalAfrica.com

Copyright © 2021 weBoost. All rights reserved. weBoost products covered by U.S. patent(s) and pending application(s) For patents go to: weboost.com/us/patents